



Penn Reel Parts list for:

KEY PART NO.	NO.	DESCRIPTION
1	1N-113H	LEFT SIDE PLATE
2	2-113H-O	OUTER RING SIDE RING
3	3-113H-LH	BRIDGE W/ SLEEVE (LEFT HAND)
4	4-349	FIBER WASHER
5	5-113H-LH	MAIN GEAR (LEFT HAND)
6	6-113H	DRAG WASHER (5 REQ.)
7	7C-113H	METAL WASHER SET
8	8-349	TENSION SPRING
8A	18-970	TENSION SPRING DRAG
9	9-113H	SPACING SLEEVE
10	10-349	STAR DRAG WHEEL
11	11-113	ECCENTRIC JACK
12	12-60	PINION YOKE
13	13-113H-LH	PINION (LEFT HAND)
14	14-99	DOG SPRING
15	15-113H	DOG
16	16-113H	LOWER BRIDGE SCREW
17	17-113H	UPPER BRIDGE SCREW
18	18-60	CLUTCH SPRING
19	19-113	ECCENTRIC
20	20-155	ECCENTRIC SPRING
21	21-66	ECCENTRIC LEVER
22	22-99	ECCENTRIC SCREW
23	23-114	HANDLE SCREW
23A	110-60	HANDLE LOCK SCREW
24	24-113H	HANDLE
26	26-113H	LEFT SIDE BEARING
27	27N-113H	RIGHT SIDE PLATE

Model: 113H-LH 1996 VERSION Posts AND Clicker (LEFT HAND VERSION)

KEY PART NO.	NO.	DESCRIPTION
28	2-113-I	INNER SIDE RING
28A	2-113-O	OUTER RIGHT SIDE RING
29L	29L-113HL	SPOOL
30	30-113	STAND
31	32-18	LEFT SIDE STAND SCREW
32	32-17	RIGHT SIDE STAND SCREW
33	33-113	ROD CLAMP
*	33R-200	RINGED ROD CLAMP (OPTIONAL)
34	34-45	CLAMP SCREW (ONLY)
34C	34C-45	ROD CLAMP SCREW W/ NUTS
35	35-60	CLICK TONGUE
36	36-113	CLICK BUTTON
37	37-113	FRAME POST
37C	37C-113HL	SPACER BAR (REAR) ("Senator II")
37N	37N-113H	SPACER BAR (FRONT) ("113H")
38	39-9	LEFT SIDE POST SCREW
39	39-3	RIGHT SIDE POST SCREW
40	**40-113HL	RIGHT SIDE BEARING WITH O RING
40A	120-113H	RIGHT SIDE BEARING O-RING (ONLY)
54	54-113	HARNES LUG
62	62-309	CLICK SPRING
62A	63-209	CLICK SPRING SCREW
69	69B-600	RETAINING RING
98	98-321	GEAR SLEEVE (LEFT HAND)
149	149-45	CLAMP NUT
149A	149-200	HEX NUT